



Document ID: FAQ-0040
XPRS access information
Date: 5.4.2019
V2.2

SATEL **NETCO** is a configuration software for SATEL IP radios. More specified information of the user account control of the SATEL NETCO software can be found from the software user manual (About → User Guide).

NETCO UI login:

- Username: **admin**
- Password: **admin**

It is possible to narrow the management interface to a specific VLAN in the NETCO software:

Network Settings → Design Assistance → LAN Settings → MGMT VLAN
VLAN address must be specified.

SATELLAR XT 5RC

Default IP address: **192.168.1.1/24**

User level WEB UI login:

- Username: **satellar**
- Password: **Satel123**

The password change:

WEB UI: Modem Settings → General → WEB GUI Password
NETCO: SATELLAR XT 5C → General → Web GUI Password

- NOTE! Changes also the SSH default user password!

Admin level WEB UI login:

- Username: **admin**
- Password: **Satel456**

The password change:

WEB UI (requires Admin –level login): Administration → WEB GUI Admin Password
NETCO: SATELLAR XT 5C → Admin Tools → Passwords → Web GUI Admin Password

LCD UI:

PIN code requirement in OFF state as a default setting. Default PIN code: **0000**

Can be changed in the device settings:

WEB UI: Modem Settings → General → PIN Code Required
→ PIN Code

NETCO: SATELLAR XT 5C → General → PIN Code Required
→ PIN Code

LCD UI "Admin Tools" settings:

PIN requirement always enabled (ON). Default PIN code: **0000**

PIN code can be changed from the device settings:

WEB UI (requires Admin –level login): Administration → ADMIN PIN code

NETCO: SATELLAR XT 5C → Admin Tools → Passwords → ADMIN PIN Code

